

Reduce load damage by always picking up the load at true vertical.

# A Visual Aid to Easily and Quickly Determine Mast Alignment

# **APPLICATIONS**

Cascade's Digital Tilt Indicator works on virtually any lift truck. This visual aid lets you know when your mast is tilted forward, backwards or true vertical. The sensitivity of the Digital Tilt Indicator is precise to within 1°. It clearly displays the angle of the mast at all times which eliminates guesswork and ultimately reduces damage and increases speed and efficiency.

### **BENEFITS**

- Allows driver to monitor mast angle at all times
- Quick installation and set up
- Automatic alignment feature
- Prevent pallet board lift off by misguided forks
- Proper alignment of the pads of a Paper Roll Clamp
- Use in conjunction with laser systems to assure laser is aligned with target

# **FEATURES**


- Compatible with 12V to 48V systems
- Accurate within 1°
- Suitable for use in climates from -25° to 140° F
- Vibrant LED display
- Hardened steel protective mounting bracket
- Can be mounted on either the left hand or right hand side of the lift truck mast








# **OPERATION**

To find true vertical mast alignment, tilt mast until green LED is lit. The LED colors determine the mast's tilt position.

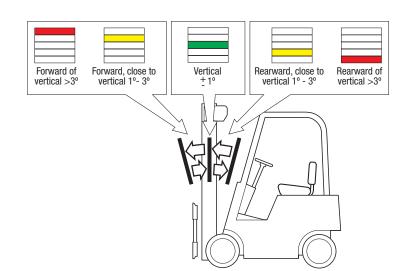

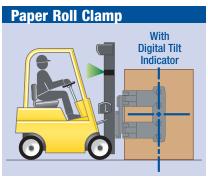

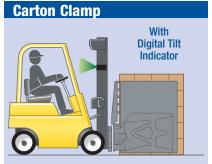

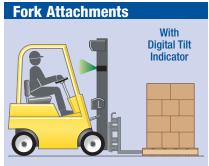








# OTHER RECOMMENDED DAMAGE REDUCTION OPTIONS

#### **Electronic Pressure Regulator**



Allows operator to select proper clamp force with control switch that can be mounted for maximum operator convenience.

#### **Clamp Open Guard**



Clamp Open Guard requires a definitive action by the driver to help prevent accidental opening of the arms. The system works by requiring the driver to hold a button down while opening the arms.

#### **Wireless Pressure Monitor**



Wireless Pressure Monitor is a system to monitor the hydraulic pressure in the clamping cylinders of an attachment on a real time basis. Perfect for allowing drivers to see the actual pressure during the clamp cycle to determine if the load holding components are malfunctioning.

#### **HFC (Hydraulic Force Control)**



HFC is a hydraulically controlled automatic clamp force system that changes the clamp force proportional to the load weight. It works by continually sensing the hydraulic force necessary to lift the load and adjusts clamping pressure as the weight of the load increases or decreases.

Cascade Corporation • PO Box 20187 • Portland, OR 97294-0187 • USA • 800 CASCADE (227.2233) • Tel 503.669.6257 • Fax 800.693.3768 • Fax 503.669.6367 Cascade Canada Ltd. • 5570 Timberlea Blvd. • Mississauga, Ontario L4W 4M6 • Canada • 800.380.2272 • Tel 905.629.7777 • Fax 905.629.7785

