







**How to determine if case is RSC or HSC:**

RSC (below) has both upper and lower flaps

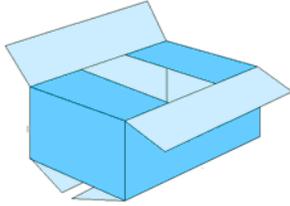


HSC (below) has only lower flaps

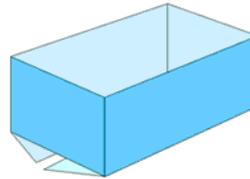


**How to determine if case is single wall or double wall:**

Single wall (below) has only one fluted medium between the outside liners

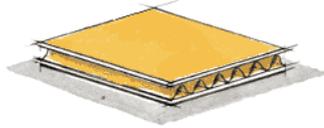

Double wall (below) has two fluted mediums between the outside liners

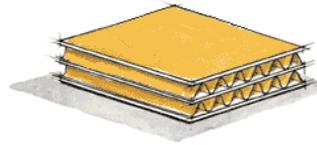

**How to determine type of flute:**

**A flute**

Flute Height = 1/4"  
Flutes per foot = 36



**B flute**

Flute Height = 3/32"  
Flutes per foot = 50



**C flute**

Flute Height = 3/16"  
Flutes per foot = 42



**E flute**

Flute Height = 3/64"  
Flutes per foot = 94



**What to look for to determine whether box strength rating is Bursting Test or ECT**

*Note: Box manufacturer's certificate is usually found on a bottom flap*

